

Use a rectangular grid measuring 631 by 600 to position panels in the correct alignment.


Maintain a seam or gap of 20mm between panels. For additional measurement information, panel codes or their orientations please refer to the IFC file.

Generic screws for standard timber wall applications are included.

However, due to variations in characteristics of the back wall as well as unknown variations in the load-bearing capacities, Aldowa is not able or liable for their fitness or suitability to your application. Therefore, for the use of appropriate screws and plugs, please seek professional advice locally or contact Aldowa with more specifics for a non-binding recommendation.

Rev. date

- 10-01-2024

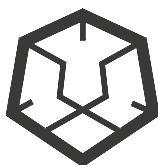

ALDOWA
LEAVE YOUR MARK

Project

Aldowa Webshop

Description

Diamond Pattern

Overschieeseweg 32
3044 EE ROTTERDAM
The Netherlands
Tel.: 010 - 208 37 88
Fax: 010 - 462 36 51
info@aldowa.nl
www.aldowa.nl

Size A4

Scale 1:22

Date 10-01-2024

Status

Example

Client: Aldowa

Project no. 5000249

Drawn by AB


Edited by

Drawing no.

Rev.

5000249.OVZ001


-

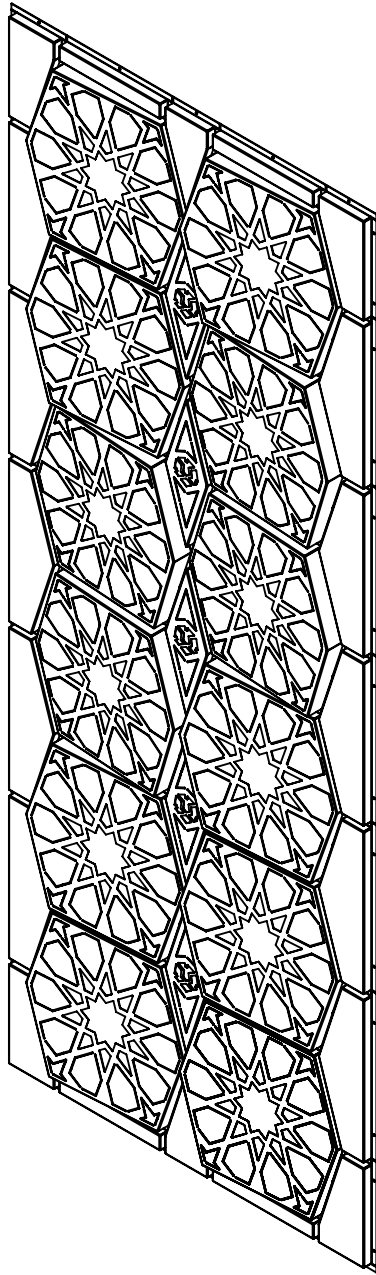

297mm*210mm

Rev. date

- 10-01-2024

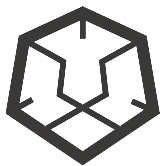

ALDOWA
LEAVE YOUR MARK

Project

Aldowa Webshop

Description

Diamond Pattern

Overschieeseweg 32
3044 EE ROTTERDAM
The Netherlands
Tel.: 010 - 208 37 88
Fax: 010 - 462 36 51
info@aldowa.nl
www.aldowa.nl

Size A4

Scale 1:22

Date 10-01-2024

Status

Example

Client: Aldowa

Project no. 500023

Drawn by AB **Edited by**

Drawing no.

5000249.OVZ0001

Rev.

-